EDEN ROC GARAGE DOORS

CODING INSTRUCTIONS: ATA PTX5/PTX4/B&D TRIOCODE



CODE LEARNING

Make sure your garage door is closed

- 1. Press and hold the **BLUE DOOR CODE BUTTON** on the control panel
- 2. Press the Transmitter button you would like to use to control the door for 2 seconds
- 3. Release and pause for **2 seconds**. Press the same button again for **2 seconds**.
- 4. Release the Transmitter Button
- 5. Press the transmitter button to test the operation of the door/gate, etc.

CODE DELETING

- 1. TURN OFF THE OPENER
- 2. Press and hold the **BLUE DOOR CODE BUTTON**
- 3. **TURN ON** THE POWER AGAIN, **WHILE HOLDING THE BUTTON**. AFTER ABOUT **15 SECONDS**, THE CODING LED WILL ILLUMINATE TO INDICATE THAT THE RECEIVER'S MEMORY HAS BEEN DELETED
- **4.** Press the transmitter button to test that the transmitter no longer works all codes, including the courtesy light codes, are now wiped.





