EDEN ROC GARAGE DOORS

CODING INSTRUCTIONS: OLD STYLE AVANTI REMOTE



CODE LEARNING

MAKE SURE YOUR GARAGE DOOR IS CLOSED

- 1. OPEN THE WHITE LIGHT COVER ON THE OPENER ON THE CEILING OF YOUR GARAGE
- 2. QUICKLY PRESS AND RELEASE THE RED LEARN BUTTON THE LED LIGHT WILL FLASH SLOWLY
- 3. SELECT WHICH BUTTON YOU WISH TO USE ON YOUR REMOTE AND QUICKLY PRESS AND RELEASE YOUR **SELECTED REMOTE BUTTON** THE LED LIGHT WILL EXTINGUISH
- 4. QUICKLY PRESS AND RELEASE YOUR **SELECTED REMOTE BUTTON AGAIN** THE LED LIGHT WILL FLASH QUICKLY
- 5. ON THE NEXT PRESS OF THE REMOTE THE GARAGE DOOR WILL OPEN.

TO CODE ADDITIONAL REMOTE, REPEAT STEPS 1 - 5

CODE DELETING

- 1. OPEN THE WHITE LIGHT COVER ON THE OPENER ON THE CEILING OF YOUR GARAGE
- 2. QUICKLY PRESS AND RELEASE THE **RED LEARN BUTTON** THE LED LIGHT WILL FLASH SLOWLY
- 3. Press and hold the **BLACK RUN BUTTON** THE LED LIGHT WILL FLASH QUICKLY
- 4. ALL REMOTE CODES WILL BE DELETED WHEN THE LED LIGHT STOPS FLASHING

When codes have been deleted, refer to step 2 under **Code Learning** above to recode remotes.





