

EDEN ROC GARAGE DOORS

CODING INSTRUCTIONS: GTS Tilt & Sectional Automatic Operator



CODE LEARNING

IMPORTANT – READ BEFORE PROCEEDING

YOUR 'LEARN' BUTTON WILL BE LOCATED IN ONE OF TWO POSITIONS SHOWN, DEPENDING ON THE AGE OF YOUR UNIT. IF YOU CIRCUIT BOARD HAS A SECOND, SMALLER BOARD ATTACHED, YOU MUST USE THE 'POSITION ONE' INSTRUCTIONS.

POSITION 1.



POSITION 2.



MAKE SURE YOUR GARAGE DOOR IS CLOSED

1. CAREFULLY REMOVE THE LIGHT COVER BY PULLING DOWN ON THE TAB NEAR THE FRONT OF THE UNIT
2. PRESS THE RED BUTTON ONCE. A RED LIGHT WILL ILLUMINATE TO CONFIRM THE UNIT IS IN LEARN MODE.
3. PRESS THE LARGE BUTTON ON YOUR HANDSET ONCE AND THEN WAIT UNTIL THE RED LIGHT ON THE RECEIVER BOARD TURNS OFF.

CODE DELETING

TO ERASE ALL HANDSETS FROM MEMORY:

1. TO RESET THE RECEIVER PRESS AND HOLD THE RECEIVER BUTTON (2.) FOR 12 SECONDS. THIS WILL ERASE ALL HANDSETS FROM THE MEMORY. THIS IS RECOMMENDED IF A HANDSET HAS BEEN LOST OR STOLEN. ANY OTHER HANDSETS PREVIOUSLY USED WILL NEED TO BE REPROGRAMMED BY THE FOLLOWING STEPS 1, 3 AND 3 ABOVE.

